# **User Manual**

# **JAXPETY**




Model Number: HG61W1064

HG61X1065 HG61E1069 HG61F1070




## You need



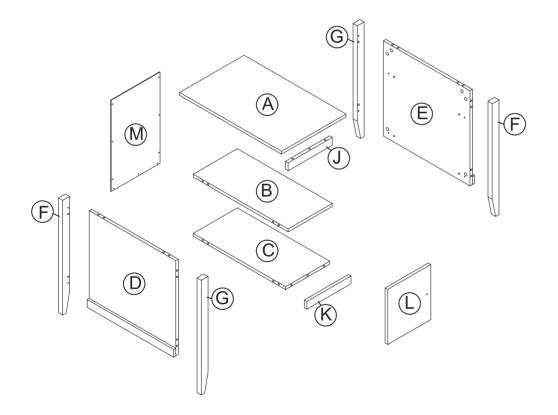

## **Hardware List**

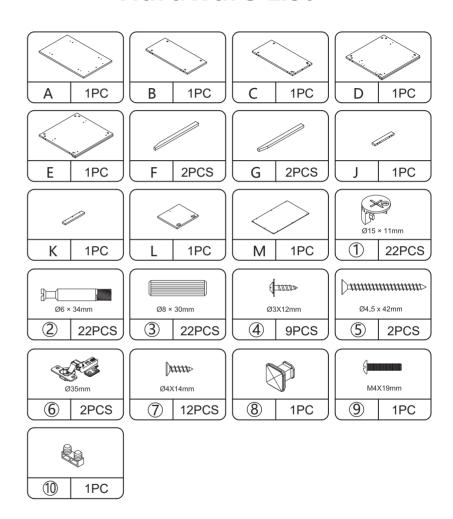


\_\_\_\_\_\_\_ 2

## PRODUCT ASSEMBLY


# Check the package contents before getting started!


## STEP 1

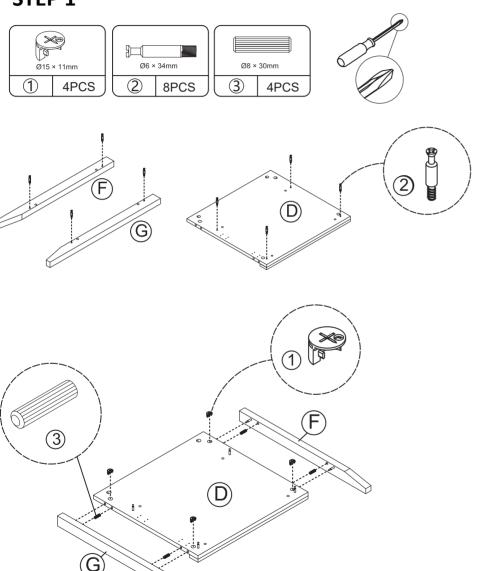

## PRODUCT ASSEMBLY

 
## STEP 2



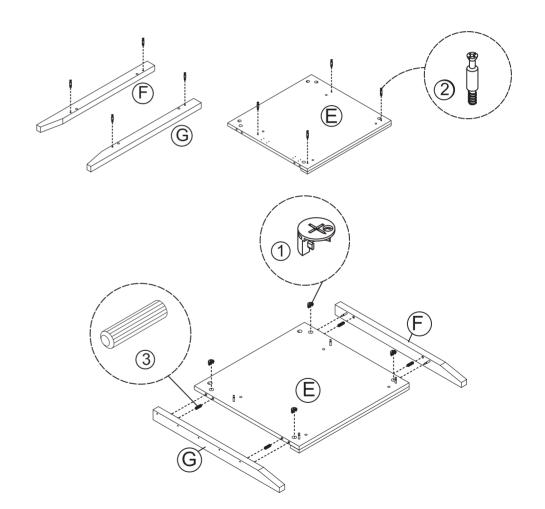


## PRODUCT ASSEMBLY

  
## STEP 3










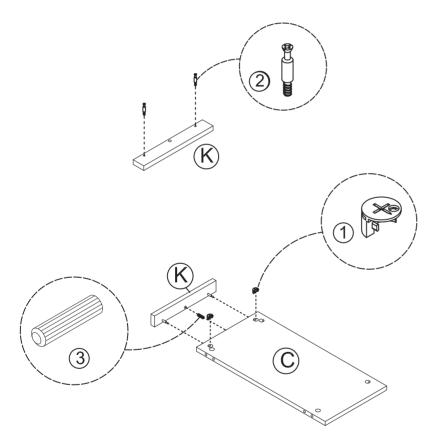


## PRODUCT ASSEMBLY
 
## STEP 4








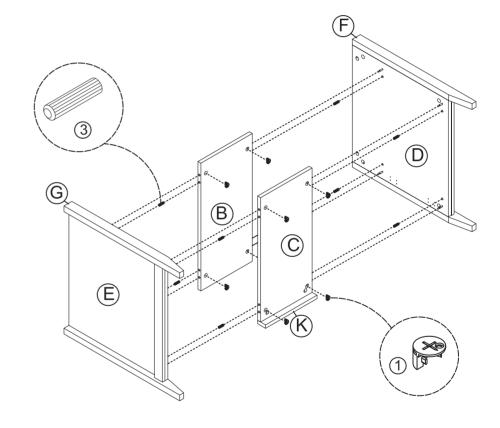


## PRODUCT ASSEMBLY

## STEP 5

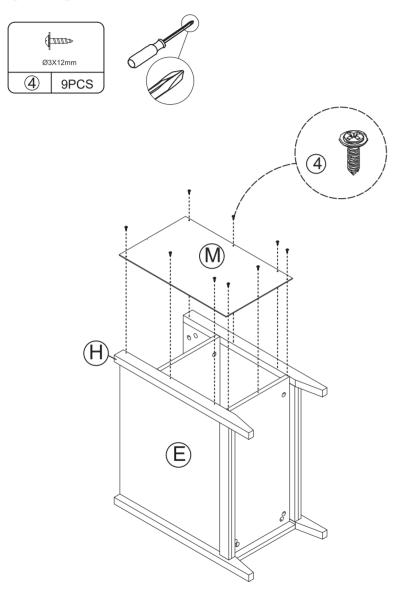


## PRODUCT ASSEMBLY


## STEP 6

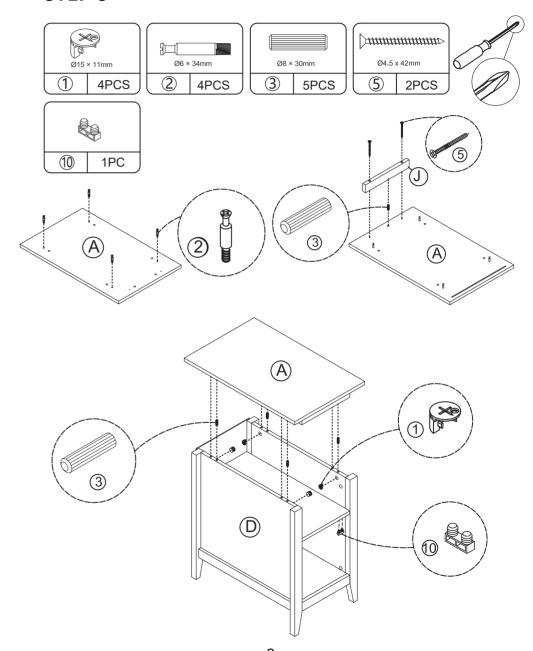


#### PRODUCT ASSEMBLY

 
## STEP 7



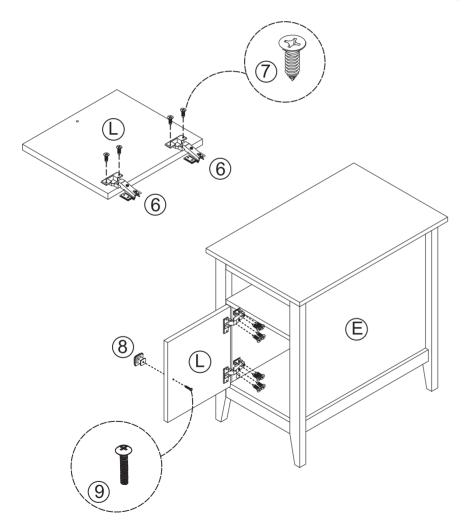


#### PRODUCT ASSEMBLY

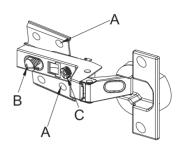

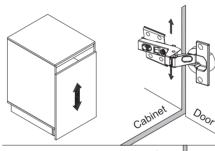


#### To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

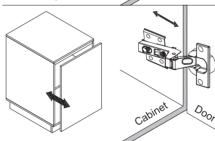

## To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

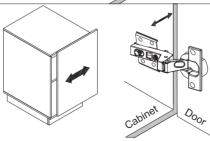

## To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.