
User Manual

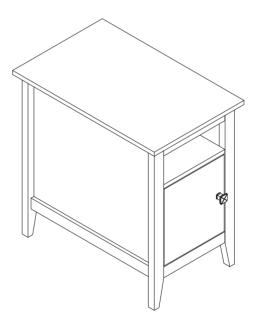




JAXPETY


JAXPETY JAXPETY

You need



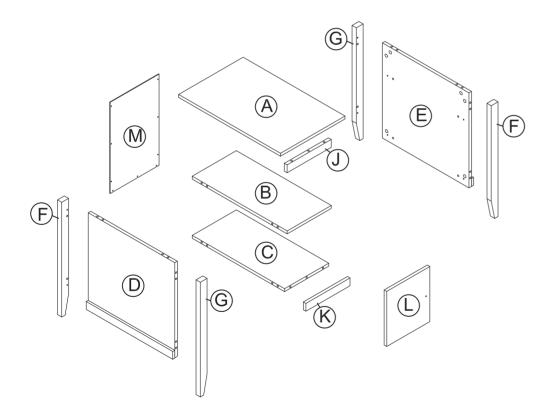

Hardware List

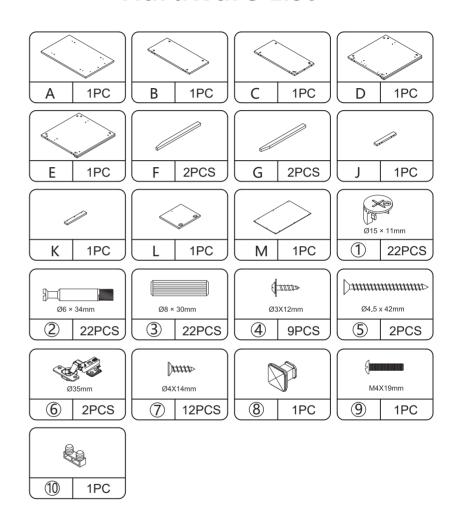


JAXPETY JAXPETY

PRODUCT ASSEMBLY

⚠ Check the package contents before getting started!


STEP 1

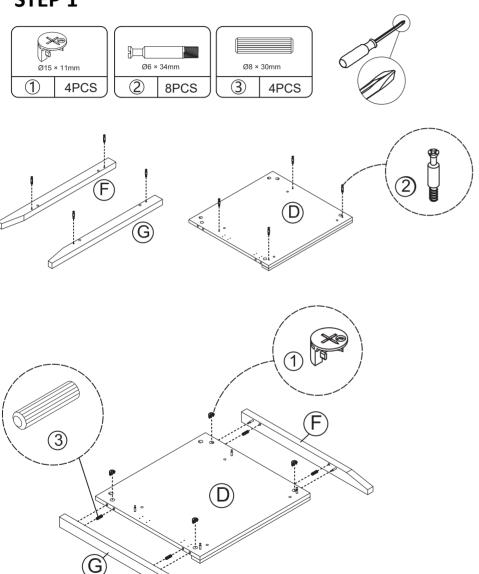

PRODUCT ASSEMBLY

STEP 2




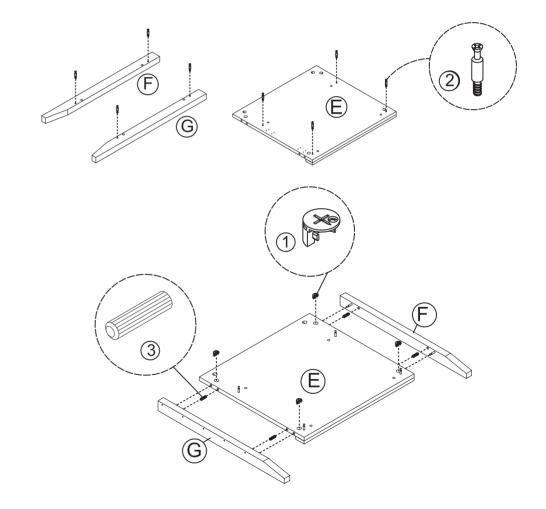

JAXPETY

PRODUCT ASSEMBLY

 
STEP 3










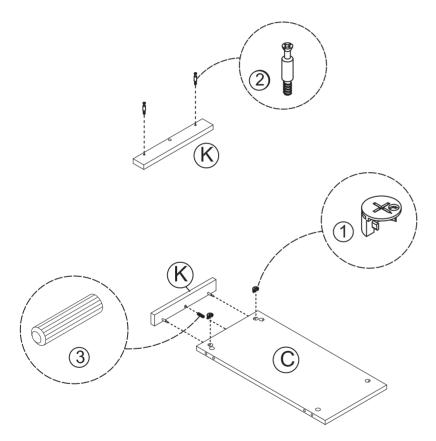

PRODUCT ASSEMBLY

 
STEP 4








JAXPETY

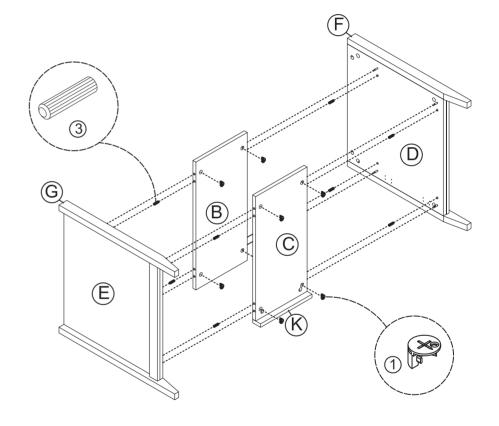

JAXPETY JAXPETY


PRODUCT ASSEMBLY

STEP 5

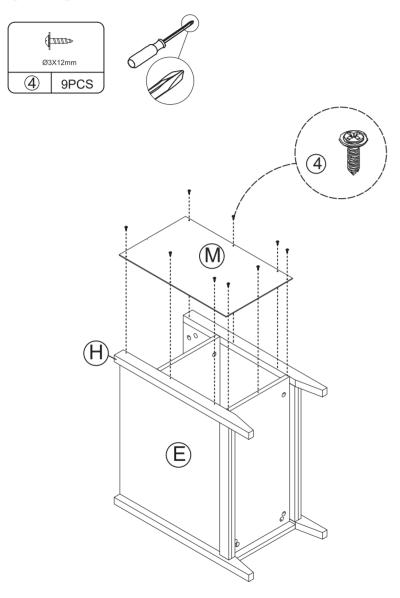


PRODUCT ASSEMBLY


STEP 6

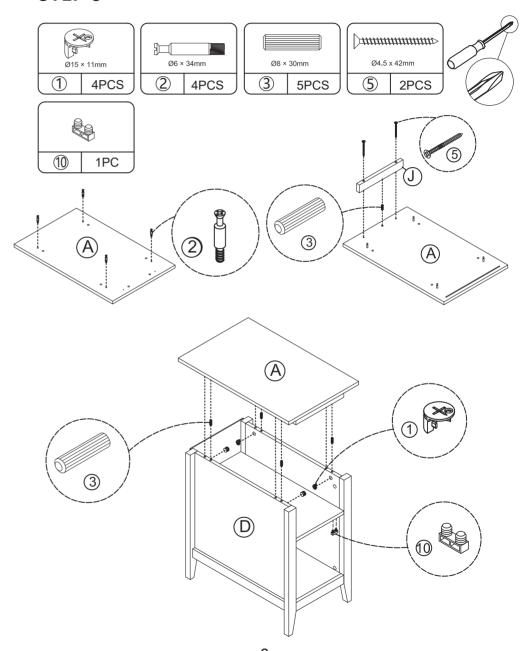


PRODUCT ASSEMBLY

 
STEP 7



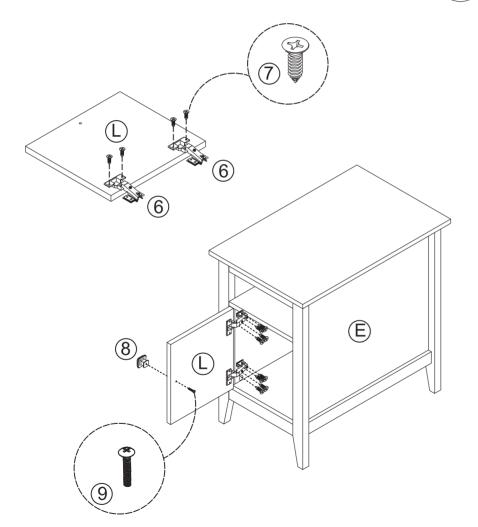


PRODUCT ASSEMBLY

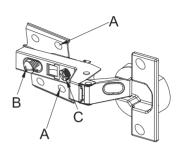

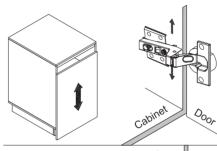


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

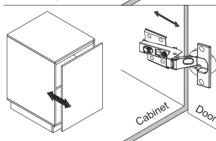

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

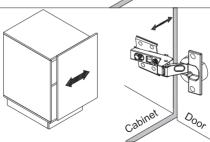

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.