 


# **User Manual**











## Reshable

## Dear Customer,

#### Thank you for your purchase.

RESHABLE is created to be the perfect starting spot for any barbers. Supplying top-quality barber supplies like barber chairs, salon stations, rolling makeup cases, styling drawer cabinets, hair tool holders, and more, we help people to keep their barber store running with the best equipment at the most reliable prices.

When you receive the product, please make sure that all the parts are intact. Then please browse the entire installation manual before assembly. If problems occur unsatisfactorily as follows:

#### a. The outer box is damaged.

b. The product is damaged/bent/cracked while you open the box.

c. The parts/accessories/assembly tools are missing.

d. The product is hard to assemble.

e. The instructions are not clear and can not be referred to.


f. The product has functional problems.


g. Other aspects that you are not satisfied with.

Please do not hesitate to contact us for help (Be sure to mark the SKU NUMBER, e.g., MR11R0246, and the TRACKING NUMBER). Our RESHABLE team with factory direct after-sales service will reply within 24 hours and do our best to resolve the problem for you. Our service is available at any time.

RESHABLE for Profession and Creativity! Sincerely, RESHABLE Team



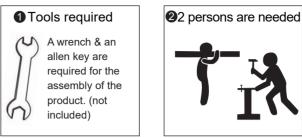


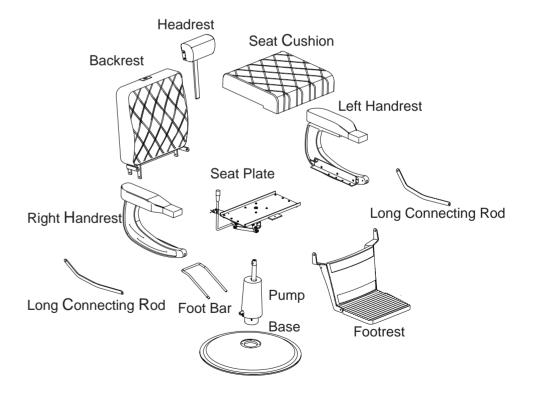





# Hardware List

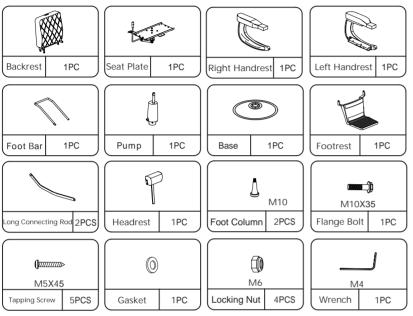



## **NOTICE:**

If your package is missing parts or you are having issues with the assembly, please call us directly. Our customer service team will address any questions or concerns you may have. Have this manual open and ready for reference.

## SAFETY:

To reduce the risk of injury when assembling & using the chair, Please follow these precautions:

• Read the instructions thoroughly before assembling and using your salon chair.

• It is helpful to have 2 people to assemble and turn the chair upright after assembling.

• Do not overextend the chair and the person weight cannot exceed 300 lbs, or it will cause the risk falling or tipping and make the occupant over.








## **STEP 1**

Pump	1PC	Base	1PC	J	Locking Nut	4PCS	]

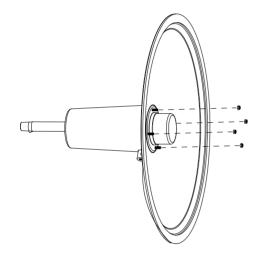



## First:Install Hydraulic Pump to Base


Step 1:Insert the threaded bolts on the pump bottom into the holes in the base top. Tighten the 4 locking nuts onto the threaded bolts. (Easier when set on one side, supported by a sturdy object.)

#### PRODUCT ASSEMBLY
 
## STEP 2



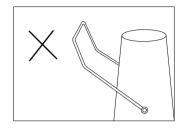

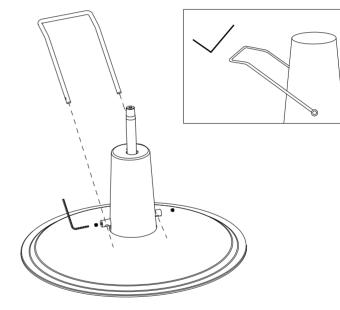

## Second:Install Foot Bar to the Assembled Hydraulic Pump & Base


Step 1:Place the assembled Base & Pump on the floor. Use Allen Wrench to loosen the screws in the crossbar (as shown). Insert Foot Bar into the holes in the crossbar. (May require to slightly squeeze the ends of Foot Bar towards each other, and need some maneuvering for the bar ends to go into place.)

Step 2: Tighten the set screws to firmly hold the Foot Bar in place.




## **STEP 3**




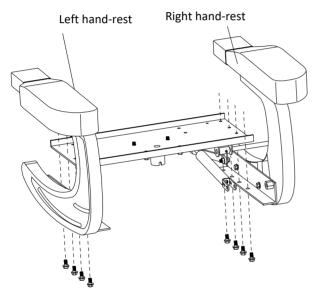

#### PRODUCT ASSEMBLY
 
### STEP 4



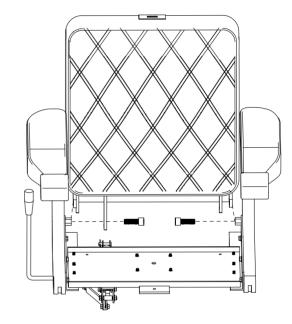

## Third: Install Handrests to Seat Plate


Step 1:Remove the 8 pre-fixed bolts on the seat plate. Step 2:Install the left handrest and right handrest to the seat plate by the 8 bolts removed from the seat plate.

## Fourth: Install Backrest to the Seat Plate

Step 1:Remove the 2 pre-fixed bolts from the holder. Step 2:Install the backrest to the handrests by 2 bolts.





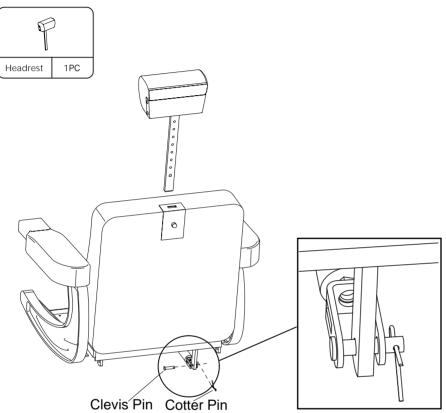


Fifth:Install Headrest and Reclining Cylinder

Step 1:Insert the headrest into the backrest.

Step 2:Assemble the U-shape reclining cylinder with the backrest iron by Clevis Pin and Cotter Pin.

#### PRODUCT ASSEMBLY

**STEP 6** 

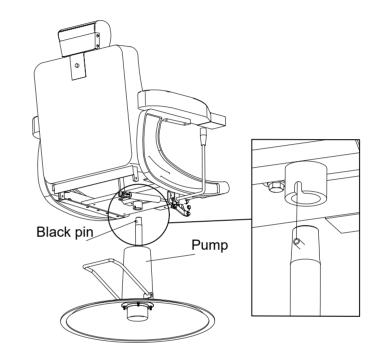

Peshable


## Sixth:Install Seat & Backrest onto Hydraulic Pump & Base

Step 1:Find the slot in the short slot under the seat This should be aligned with the black pin on the top of the hydraulic pump. Step 2:Set the assembled seat & backrest onto the assembled hydraulic pump & base. Step 3:Secure with screws.





# M10 Foot Column Pootrest 1PC M10X35 Flange Bolt 1PC Gasket 1PC

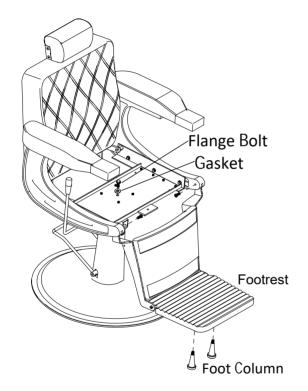


Seventh:Install Foot Pedal


Step 1:Remove the two pre-installed screws and install the footrest. Step 2:Install the two foot columns.

- 11

#### PRODUCT ASSEMBLY
 
## **STEP** 8



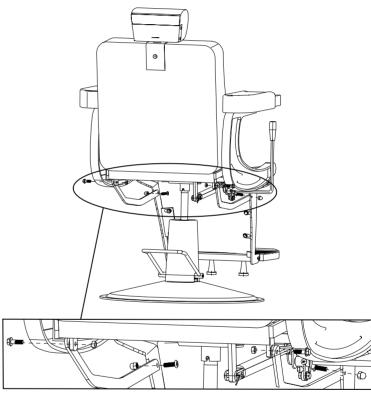

## Eighth:Install Long Connecting Rod

Step 1:Remove the pre-fixed screws. Step 2:Attach the long connecting rod to the chair.

 



12 -



#### **OPERATE THE CHAIR**

## **STEP** 9



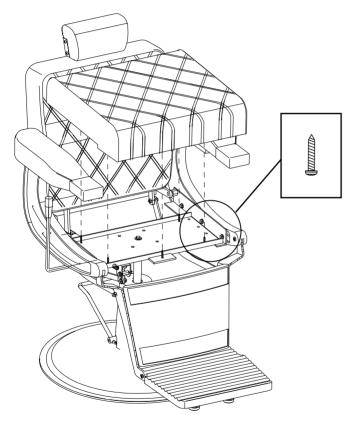

Ninth:Install Seat Cushion

Step 1:Secure the seat plate with 5 automatic screws .

- 13 -

#### **OPERATE THE CHAIR**



Reshable

**First:Loc**k **the** Chair 1.Lift the Foot Bar up to lock the seat in place.



## Second: Raise the Chair

1.Step down the Foot Bar repeatedly to raise the chair to the desired height.



#### **OPERATE THE CHAIR**



## **Third:Lower the Chair**

1.Step down the Foot Bar to the bottom and hold it to lower the chair.



## Fifth:Raise and Lower the Headrest

1.Press the button on the chrome plate and pull up to raise, or push down to lower the headrest.



Fourth:Recline the Backrest and Legrest

1.Push the lever on the side of the chair down/back while the occupant leans back and make the legrest up . Pull the lever up/forward to allow the backrest to raise up and make the legrest down.



## Sixth:Unlock the Chair

**OPERATE THE CHAIR** 

1. Step the Foot Bar down to unlock the seat to allow to rotate freely.





#### OPERATE THE CHAIR

Daily Maintenance					
Q:How to maintain the backrest or seat daily?	A: The PVC leather should be cleaned regularly. Spray a little of the leather care solution onto a sponge and then use the sponge to wipe the leather surfaces gently.				
Q: How to maintain the hydraulic pump?	A: Keep the surfaces of the hydraulic pump (including the centre shaft) clean. Sit on and raise/lower the chair periodically to expel the air inside. Regularly wipe the hydraulic pump with anti-rust oil.				



#### **OPERATE THE CHAIR**

Frequently Asked Questions					
Q: What if the chair is difficult to rotate?	A: Please check whether the foot lever is stepped to the lowest. If it's the lowest but still has the problem, there could be something wrong with the pump. You need to replace it.				
Q: How to prevent the chair from leaning forward?	<ul> <li>A: When you sit on the chair and lean all your weight forward deliberately, the chair will indeed tilt. So please notice this point: if both your feet are on the footrest, please sit back as far as you can; meanwhile, please ask the barber or someone else to step the foot lever and set the chair to the lowest when the guest sitting on the chair is ready to stand up. (Note: please remind guests not to stand on the footrest with both feet, please put one foot on the ground first.)</li> <li>A: In this case, there may be something wrong with the installation. Please check whether the mounting direction of the seat chassis connector is wrong. The direction of the slot in the seat chassis connector should be opposite to that of the footrest (refer to the detail drawing in STEP6). When it is confirmed, please make sure whether the hydraulic pump is properly inserted into the pump pin.</li> </ul>				
Q: If the chair keeps tilting and cannot be righted, what should I do?					
Q: What should I do when the seat cannot be lifted or lowered normally?	A: In this case, there may be air in the pump. Please sit on the chair and raise it to the highest, then lower it. Repeat the above action until it can be used normally.				

Dear Customer, if you have any advice or questions on the installation or product after receiving, please give us feedback as soon as possible. We will provide you with professional guidance. Please feel free to use it.