

# INSTRUCTION MANUAL

## STEAM CLEANER



**Read these instructions carefully before using your steam cleaner.  
Please keep this instruction manual in safe place for further use.**

Applicable Standards: EN60335-1

### Product Characteristics

- **Technically leading**

With exclusive patented technology, high-temperature and high-pressure steam is used for clearing away the dirt and stains on the floor boards, doors, windows and clothes; The machine also can be used for killing bacteria on surfaces, and removing dusts and bacteria, and it is an environment-friendly and sanitary product.

Automatic control of heating, able to generate steam continuously and continuous cleaning is easy. With pure high-pressure water steam used, no chemical agents are added, completely environment-friendly.

- **Higher Safety**

Designed to prevent heating empty boiler, after the water in the boiler tank is heated and evaporated completely, the machine will automatically disconnect the power supply and thus prevent empty heating. With high-sensitivity thermostat, 140°C high-temperature steam is available, ensuring disinfection and sterilization. The safety valve has automatic pressure release function. When there is high steam pressure in the tank, the valve will automatically open and release the pressure.

Extended power cord with double insulation, can effectively insulate the cable from water and dust, and ensure safety.

- **Durable**

The machine is designed to have aluminum alloy die casting boiler body with extra-thick inner wall, and can resist high pressure and has a long service life. Complete plastic shell is made from quality PP and PA with anti-corrosion and high strength.

- **Energy-saving**

With integrated design of specially-made heating tubes and boiler body, overall heating is provided, high heating efficiency and energy-saving.

Double-layer shell structure can effectively prevent heat loss, environment-friendly and energy-saving.

 
- **Easy to use**

Switch on power supply, and the machine immediately starts heating process. When it heats to specified temperature, press the steam button, and steam will be sprayed out slowly. So the machine is easy to operate.

With complete cleaning accessories supplied, the machine can be assembled and disassembled easily. It can be used to clean the doors, windows, floor boards and clothes, and thus is applicable widely.

## Description of Structuring Parts

1. Body
2. Short spayer nozzle
3. Safety cap
4. Steam button
5. Handle
6. Power cord
7. Power Indicator
8. Funnel
9. Measuring cup
10. Nylon round brush
11. Bent spray nozzle
12. Long spray nozzle
13. Extended connecting spray nozzle
14. General spray nozzle
15. Spray nozzle for door/window
16. Towel sleeve

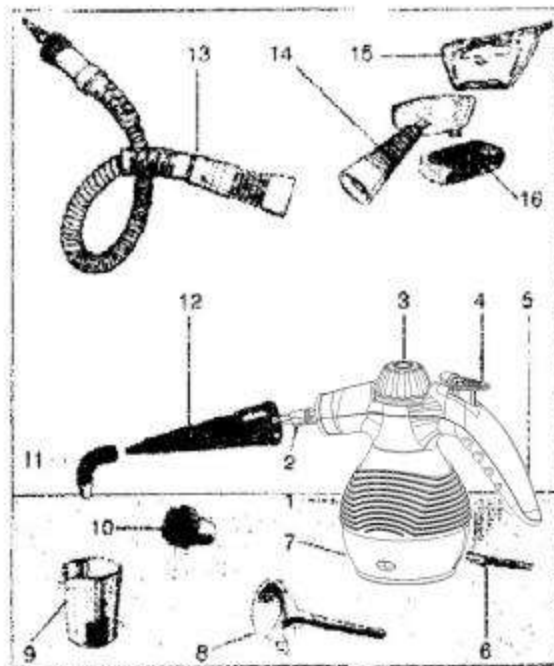

## Safety Precautions

⊘ This icon represents "Prohibition"	⚠ This icon represents "Warning"
1. Do not allow children to use this machine independently or little children to be too near to this machine when no adults attend to them.	⊘
2. To prevent electrical shock, do not immerse power cord or power plug in water or other liquids.	⊘
3. The power cord and power plug should be in good condition and must not be damaged. Damaged or defective power cord and power plug must not be used and should be repaired at appointed service center.	⚠
4. This product is for only use in households and must not be used for industrial applications.	⊘
5. Do not turn on power supply until the tank is full of water.	⊘
6. Used power supply should comply with the product requirements of the manufacturer.	⚠
7. During operation, the tank mouth must be plugged hermetically and safety cap should be tightened in position.	⚠
8. A socket with special earthing wire must be used.	⚠
9. In use, the machine body must not be inclined at more than 45 degrees. Or otherwise boiling water will be sprayed out together with team.	⊘
10. Do not direct the steam towards persons, animals or other electrical products.	⊘

11. Before refilling water, ensure to unplug the power cord to disconnect power supply. It is necessary to unplug the power cord after the machine is used, before it is cleaned and while it is repaired.	⚠
12. Do not add any rust remover, odorcounteracting agent, alcohol and detergent into the tank, which will possibly cause damage to the tank.	⊘
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.	⚠
14. The appliance has to be unplugged after use and before cleaning or user maintenance of the appliance.	⚠
15. Do not use in swimming pools containing water.	⊘
16. Liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.	⚠
17. The filling aperture must not be opened during use.	⊘

**Important:** never overfill the tank, or otherwise the steam generation will be affected or too high steam pressure will be caused.

## Accessories supplied with the machine

Name	Funnel	Measuring cup	Nylon round brush	Towel sleeve	Long spray nozzle
Qty	1	1	1	1	1
Name	Spray nozzle for door/window	General spray nozzle	Bent spray nozzle	Extended connecting spray nozzle	User manual
Qty	1	1	1	1	1

## Technical Specification

Rating of power supply: 110-120V, 60Hz  
 Tank capacity: 350ml  
 Suggest water capacity: 250ml  
 Rated power: 900W-1050W  
 Steam pressure: 0.25MPa  
 Injected steam capacity: 28g/min  
 Temperature controller: functioning temperature: 135°C;  
 fuser: functioning temperature: 167°C  
 Overall dimension: 415x131x215 mm  
 Net weight: 1.25kg

## Functions

### •Disinfection and sterilization

Install the long spray nozzle on the main body and aim the spray nozzle at the position that needs disinfection, and then press down the steam button. High-temperature steam can kill bacteria.

### •Cleaning the clothes

Install the general spray nozzle on the main body, and then cover the towel sleeve on it. Aim the spray nozzle at the hung clothes, and press down the steam button and move the nozzle up and down as well as to the left and to the right at the same time. Then stains can be removed from the clothes.

### •Cleaning doors and windows

Install the general spray nozzle on the main body, and then install the spray nozzle for door/window on it. Aim the spray cup at the door/window, and press down the steam button and move the nozzle up and down as well as to the left and to the right at the same time. Then stains can be removed from the door/window.


### •Cleaning the floor boards

Install the extended connecting spray nozzle on the main body, then install bent spray nozzle or round spray nozzle. Aim the spray nozzle at the floor board, and press down the steam button to remove the dirt and stains in wall corners and on the floor.

## Operating Instructions

### Operation Procedures

- 1 Unpack the product, check the accessories and documents supplied with the product and make sure that the product and accessories are not damaged.
- 2 Before use, please read the User Manual carefully. The steam cleaner is only for use in households.
- 3 First, place the steam cleaner on a level platform, push down the safety cover, unscrew the

safety cap counterclockwise, and then install the funnel. As chatting:  (I)



- 4 Take suitable clean water with the measuring cup, and add the water into the tank. (Max. capacity of the tank is 350ml. Do not overfill the tank and some space must be left in the tank). Re-install the safety cap and tighten it in position
- 5 Check the power supply and socket, and confirm they comply with the requirements given in the user manual, then connect the power supply.

- 6 Indicator lamp will turn off in 3 minutes after connect the power supply, it means steam is ready. At this time put forward the safety switch on the steam button then lightly press the steam button and check whether steam is sprayed out of the nozzle. (Do not aim the spray nozzle at any animal, person or electrical products).
- 7 If there is steam sprayed out, release steam button and installs suitable accessories according to your needs, then press down the steam button again in order to carry out the operations required by you.
- 8 When finish the cleaning job or stop the machine to do some other things, raise the steam button, then safety switch will takes effort.

### Installation of Accessories

 
1. Install the spray cup with hairbrush

Hold the pipe section of the spray cup with hairbrush in your hand, align the arrow on the spray cup with the single-line mark on short spray nozzle on the machine body, and insert the spray cup in position. Rotate the spray cup in clockwise direction, and align the arrow on the spray cup with the double-line mark on short spray nozzle on the machine body, as shown in Figure 1. Fix the spray cup on the machine body. To remove the spray cup with hairbrush, please rotate the spray cup inversely (counterclockwise) as shown in Figure 2, and align the arrow on the spray cup with the single-line mark on the machine body. Then the spray cup with hairbrush can be pulled out.



2. Install spray cup with round brush or bent spray cup

For direct installation on short spray nozzle, aim the spray cup with round brush or bent spray cup at the top of spray nozzle, as shown in Figure 3, and push the spray cup upwards until it is in position. As the short spray nozzle and spray cup are positioned in six directions, the angle and direction can be adjusted during the installation. Or, first install long spray cup and then the spray cup with round brush or bent spray cup. The long spray cup is installed in the same method as the installation of spray cup with hairbrush. The spray cup with round brush or bent spray cup and long spray cup can be installed in the same procedures as the installation on short spray nozzle.

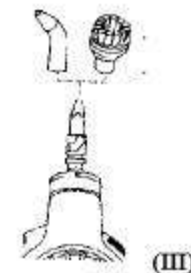


### 3. Installation of spray cup for door/window

First install the spray cup with hairbrush on short spray nozzle

As shown in Figure 4 and Figure 5, install the two small hooks of the spray cup for door/window onto suspension lugs of the spray cup with hairbrush, and then trigger the big hook of the spray cup for door/window, and push the spray cup for door/window up and clutch it onto the body of the spray cup with hairbrush.



 (IV)

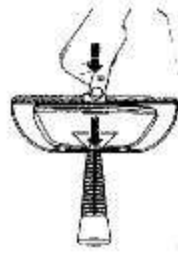

(V)

#### Refill water during operation

1. Unplug the power cord and disconnect the power supply
2. Press down the steam button to release the pressure until no steam is injected out.
3. Slowly unscrew the safety cap but do not remove it, and residual steam will be discharged slowly until no steam comes out. Then place the machine in a cool place to cool it down for about five minutes. Finally, completely remove the safety cap.
4. Use the funnel and measuring cup to refill a suitable quantity of cold or hot water into the tank.
5. Re-install the safety cap onto the machine body and tighten it in position.

#### After the machine is used

1. After the cleaning machine is used, unplug the power cord and disconnect the power supply.
2. Press down the steam button to release the pressure until no steam is injected out, when no steam injected out, raise the steam button, then safety switch will take effort.
3. Slowly unscrew the safety cap but do not remove it, and residual steam will be discharged slowly until no steam comes out. Then place the machine in a cool place to cool it down for about five minutes. Finally, completely remove the safety cap.
4. Empty the residual water in the tank and clean the external surface with a piece of dry cloth.
5. At last, re-install the safety cap onto the machine body and tighten it in position.

#### Warnings:



 
Danger of scalding

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. The filling aperture must not be opened during use.

DO NOT direct steam towards persons, animals or other electrical products.

#### Correct Disposal of this product

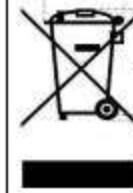

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.