










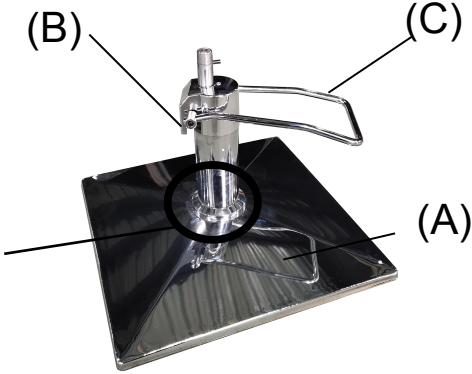


INSTALLATION INSTRUCTION


A×1 	H×1 
B×1 	I×1 
C×1 	J×6 Hexagon socket head bolt M6X12  6mm 12mm
D×1 	K×6 
E×1 	
F×1 	
G×1 	

①




Step1 : Install B to A with J
Step2 : Install C to B

②



Step1 : Preinstall E to D but do not tighten the three bolts.
Step2 : Remove the 6 Hexagon socket head bolts which pre-fixed in the D and E.
Step3 : Install F and G to D and E with 6 Hexagon socket head bolts and 6 bolt covers (K)

③

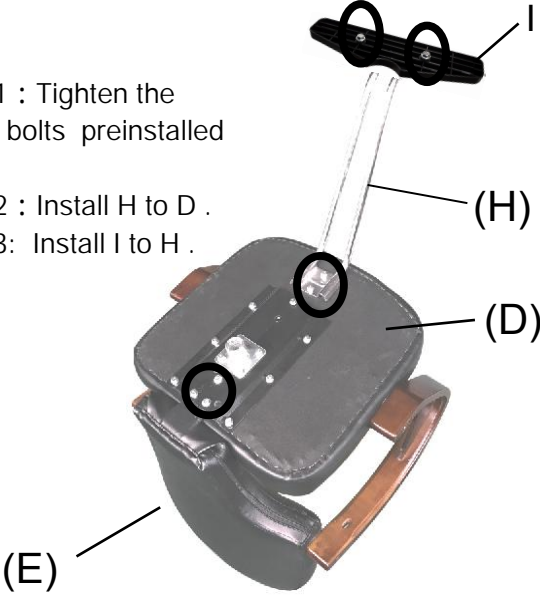

Step1 : Tighten the three bolts preinstalled E .
Step2 : Install H to D .
Step3: Install I to H .

④ Installation complete



Please follow the installation instructions to install your chair