

Use Method



- 1**
- Place on a smooth horizontal ground before use, pull out slide valve while close the seat cover (Caution: as change of air pressure and temperature may cause pressure in waste holding tank, please take care when pull out the slide valve or open the cap of waste holding tank first time to avoid any waste spill out.)



- 2**
- Open seat cover to use (Caution: do not lean on the seat cover, it may cause dangerous)




- 3**
- Press pump to flush

- 4**
- Push in slide valve after flush


Waste Treatment




- 1**
- Make sure slide valve closed

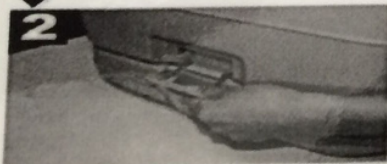

- 2**
- Separate the latches from the tank

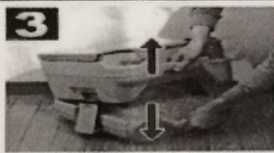

- 3**
- Remove fresh water tank upright

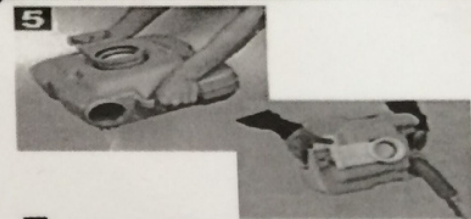

- 5**
- Remove the cap, empty waste holding tank and clean it
- 6**
- Confirm the sealed circle in situation and fasten the cap

Caution for use

1. Keep upright, handle with care, avoid high temperature, keep away from sharp objects that could pierce the tanks.
2. Make sure there are enough water in fresh water tank, clean waste holding tank periodically
3. Always following manufacturers' instructions, remove the cap, fill the waste tank with required amount of toilet chemical after cleaning